


SEDIMENT BARRIER - SILT FENCE
PROPER INSTALLATION

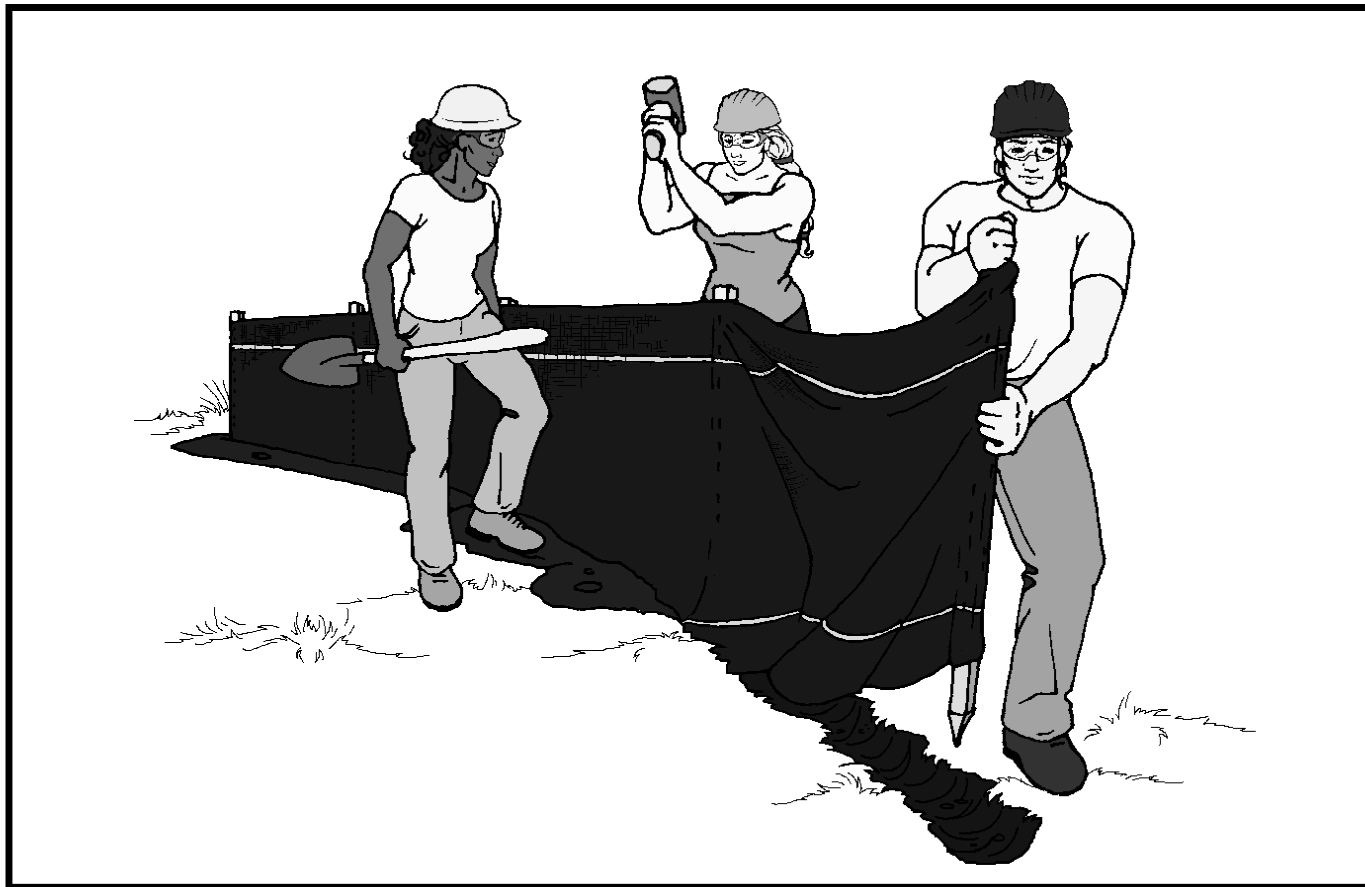

- Dug trench to key material into ground
- Stakes are placed facing away from disturbed area
- Excess material on bottom is buried with excess dirt to prevent water from flowing under fence